 




# Panasonic Lumix DMC-FH20 Memory Card Replacement

Replace your memory card if it's full or broken.

 
Written By: Arianna Boushell

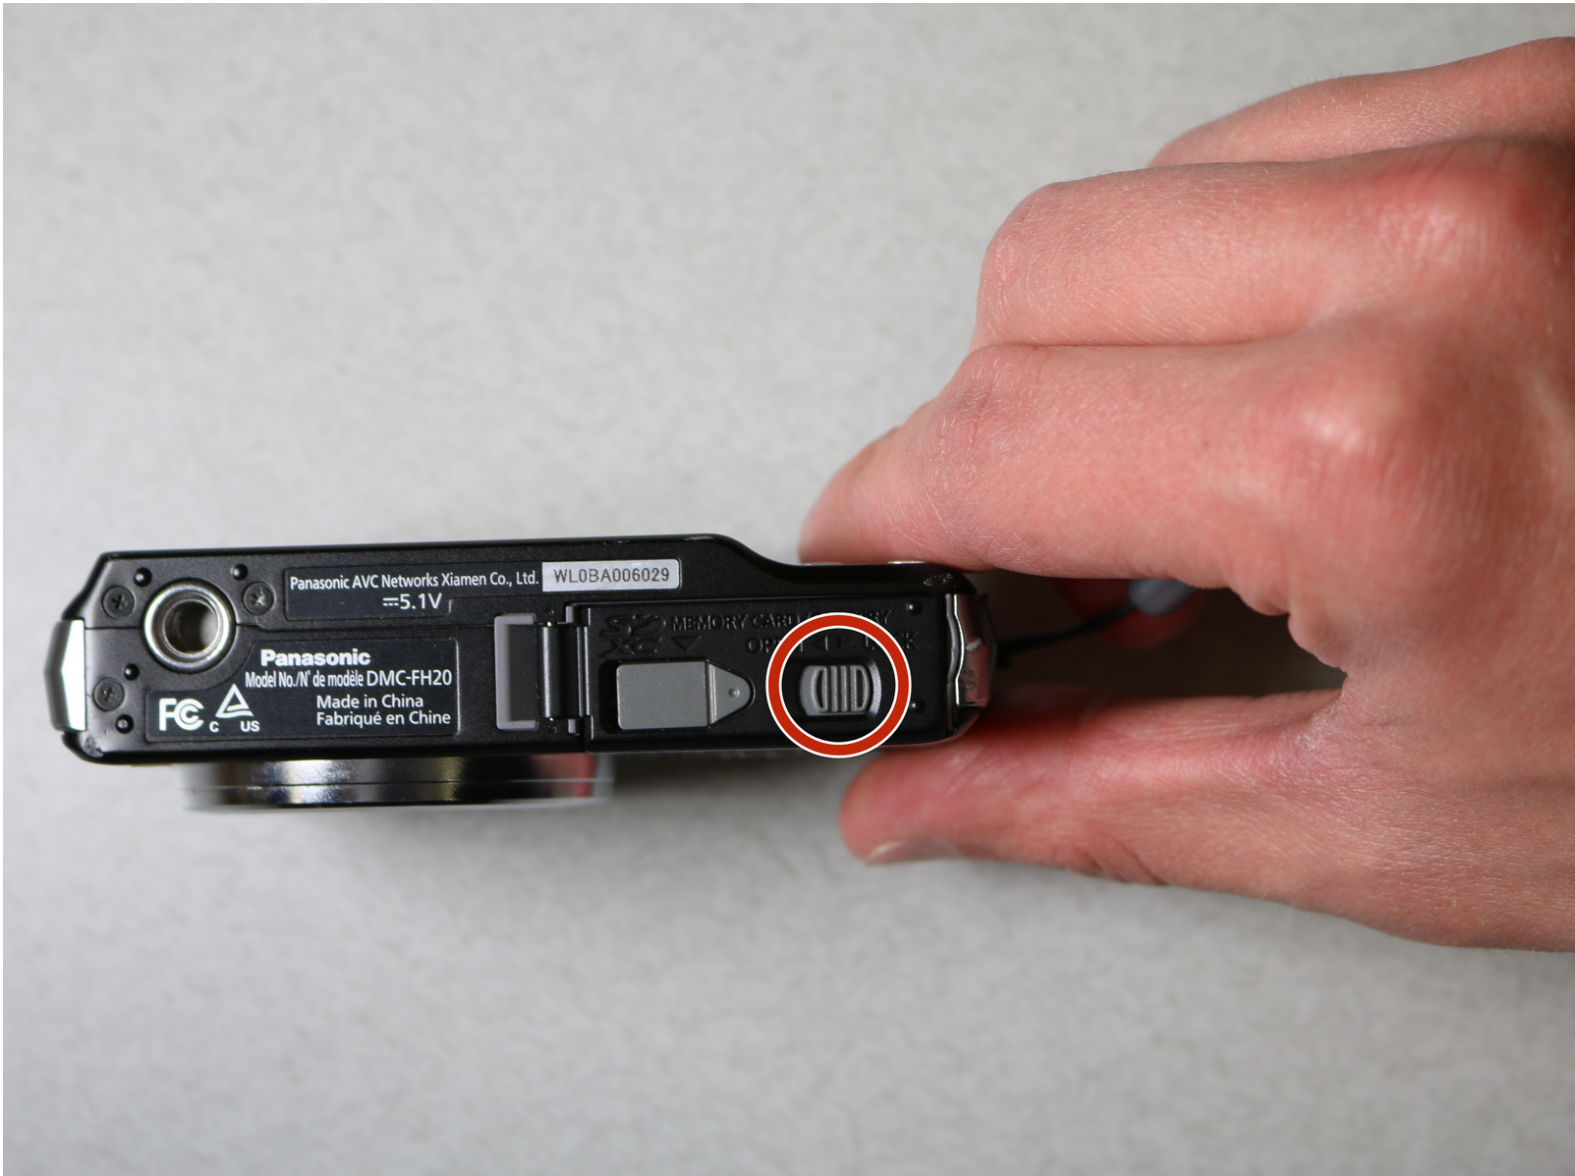

## INTRODUCTION

In order to replace the memory card, you won't need any special tools. This repair might be necessary if your memory card is full or broken.

## Step 1 — Memory Card

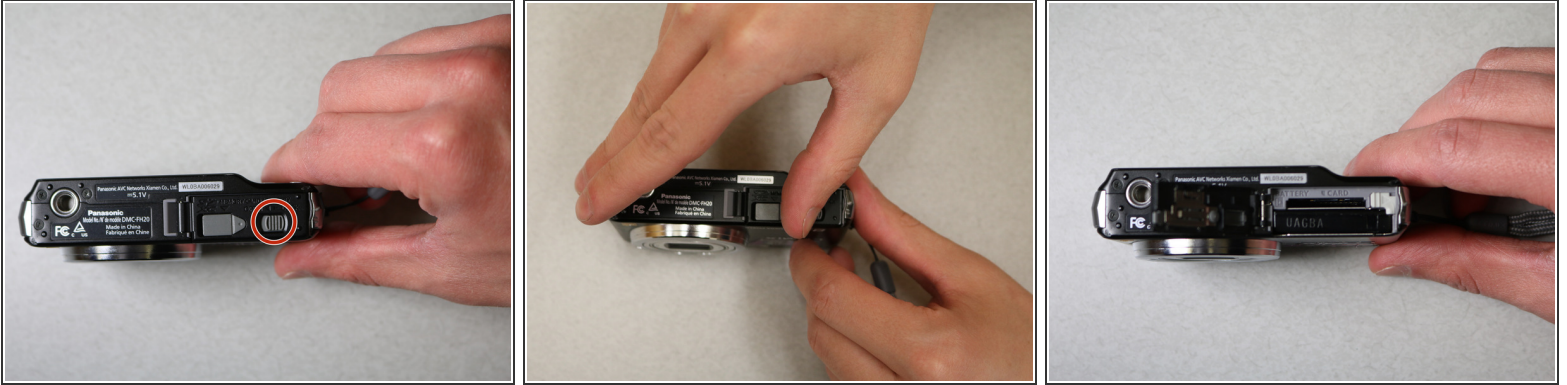

- On the bottom of the camera, move the gray switch that has the words "open" and "lock" above it to the open position. The case will open.

## Step 2



- Once the case is open, you will see your memory card in the marked slot. Push the card down until you hear a small click. The card will then pop out and you will be able to remove it.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-04 05:34:57 PM.